- Softener
- Wash
- Prewash
- On/Off button
- Running pilot lamp
- Blocked door pilot lamp
- 500 1000 Spin speed selector
- Rinse hold
- No spin
- 1/2 Half load wash/dryer
- °C Wash temperature selector
- Dryng programme selector
- P Wash programme selector

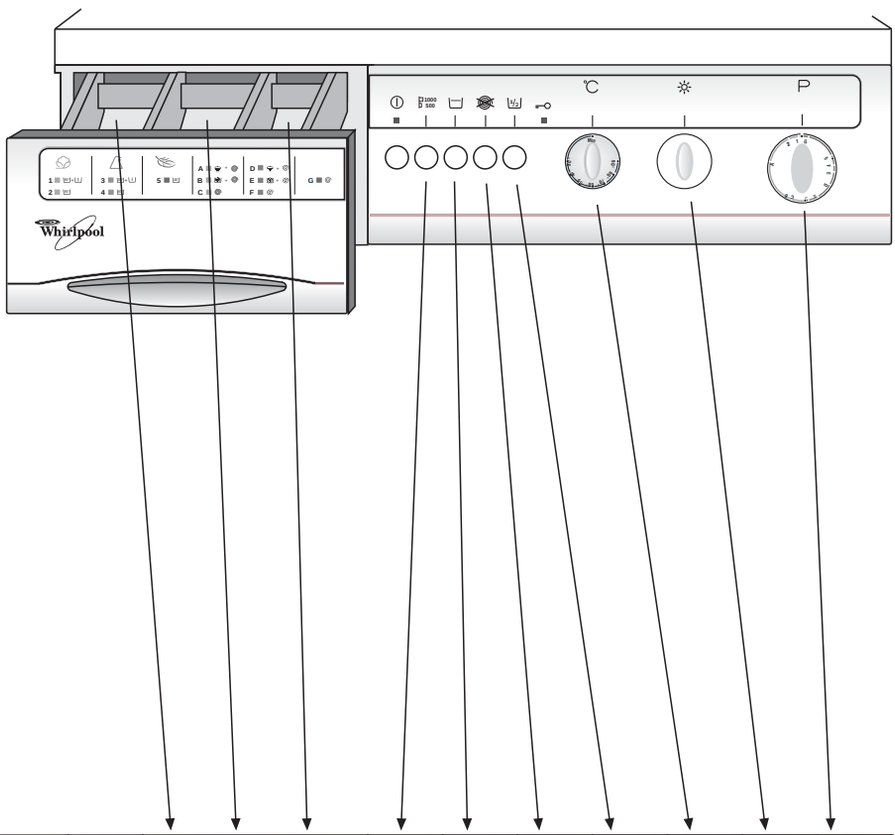

	Load	Programme	Max Load Kg	Detergent in dispenser: Prewash	Detergent in dispenser: Wash	Detergent in dispenser: Softener	Spin speed selector 500 1000	Rinse hold button	No spin button	Wash/dry half load button 1/2	Wash temperature selector °C	Drying programme selector	Wash programme selector P
90°	Very dirty white cotton	With hot prewash	5	I	II		Optional	-	Optional	Optional	90°	70/120	1
90°	With cotton no ironing	With hot prewash	5	-	II		Optional	-	Optional	Optional	90°	70/120	2
60°	Cotton with resistant colours	Without prewash	5	-	II		Optional	-	Optional	Optional	60°	70/120	3
40°	Mixed fibres with colours	Without prewash	5	-	II		Optional	-	Optional	Optional	40°	70/120	4
	Rinses and long spin	-	-	-	-	Optional	Optional	-	-	-	-	-	A
	Long spin	-	-	-	-	-	Optional	-	-	-	-	-	B
60°	Resistant synthetic fibres	With prewash	2	I	II		-	Optional	Optional	-	60°	30/50	5
60°	Slightly dirty resistant synthetic fibres	Without prewash	2	-	II		-	Optional	Optional	-	60°	30/50	6
40°	Synthetic fibres with colours	Without prewash	2	-	II		-	Optional	Optional	-	40°	30/50	7
40° 30°	Wool	Without prewash	1	-	II		-	Optional	Optional	-	Min	-	8
	Rinses and short spin	-	-	-	-	Optional	-	Optional	-	-	-	-	C
	Short spin	-	-	-	-	-	-	-	-	-	-	-	D

For the use of the machine as a dryer see chart back →

USE OF MACHINE AS A DRYER

USE OF THE DRYER

The machine is endowed with a special water system that can condense the steam created during the drying cycle and evacuate it through the normal discharge.

NOTE: During the drying cycle the water tap must stay open and the outlet hose must be correctly positioned (see the installation instructions).

MAX. LOAD FOR DRYING CYCLE

In order to obtain the best drying results no not exceed the following laundry loads:
- resistant fabric kg. 2.5 (kg. 2 for heavy bulky laundry)
- mixed and synthetic fibres: kg. 1.5

The above recommended loads allows a free moving of the laundry and avoid excessive creasing so as to guarantee a uniform drying result.

DRYING TIMES

The following drying times change according to the spin cycle the laundry has gone through and the features of the fabrics. The user will learn the best drying times by experience.

	LOAD	LAUNDRY READY TO IRON	LAUNDRY READY TO USE
COTTON:	2.5 kg.	100 min.	120 min.
	1.5 kg.	50 min.	70 min.
SYNTHETIC FIBRES:	1.5 kg.	“	50 min.
	0.5 kg.	“	30 min.

ATTENTION: Do not use the dryer for cloths treated with solvents or oil by-products since the volatile substances could cause an explosion.

NOTE: Be very careful not to dry the laundry too much. It is recommended to leave it a bit damp. An excessive drying could crease the laundry making the ironing difficult.
Do not use the dryer for sleeping-bags, eiderdowns, pillows and bulky blankets. These items expand while drying hindering a proper air flow inside the machine.

Normally possible laundry fraying is evacuated through the outlet hose.
Should you have used the machine only as a dryer or washed and dried a particular cloth, we strongly recommend to take out the laundry and start a rinse and spin programme so to empty the drum from possible fraying preventing it from heaping up during the next cycle.

NOTE: The dryer gets hot while running.
- Do not let children touch the door glass while the machine is running.
- Be very careful not to touch the door glass while taking out the laundry because it can burn.
- Be very careful with zippers, metal buttons and the like because they can burn while taking out the laundry.

DRYING CYCLE PROGRAMME SELECTION

It is possible to select the drying function only when the machine is on position (STOP on the programme selector P).

1) Load the machine and shut the door keeping in mind the “notes” about the max. laundry load for drying cycle.
2) The machine can operate two drying cycles with different temperatures, a high temperature for cotton, selectable at the off position after programme (**B**).
   A low temperature for synthetic fibres, selectable at the off position after programme(**D**).
3) Open the water tap and keep it open during the programme cycle. Make sure that the outlet hose is in correct position (in case of a doubt see the installation instructions) and that the machine is electrically connected.
4) Push the half load button for washing and drying. \1/2/
5) Select the required drying time by the drying programme selector.
6) Push the ON/OFF button to set the machine in operation.

WASHING/DRYING CYCLE SELECTION

1) Load the machine and shut the door keeping in mind the “Notes” about the max. laundry load for drying cycle.
2) Drying cycle wil vary according to the wash cycle selected.
   For cotton/linen programs through, 1-4 a higt temperature will be used at the stop position following program B.
   For synthetic/wool programs 5 through 8 low temperature will be used at the stop position following program D.
3) Open the water tap and keep it open during the programme cycle. Make sure that the outlet hose is in correct position (in case of a doubt see the installation instructions) and that the machine is electrically connected.
4) Push the half load button for washing and drying. \1/2/
5) Select the required drying time by the drying programme selector.
6) Select the required washing programme by wash programme selector. P
7) Push the ON/OFF button to set the machine in operation.